

CA-406-A



CA-406-B




CA-406-D



CA-406-E



CA-406-F

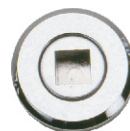

CA-406-G



CB-406-A



CB-406-B



CB-406-D




CB-406-E




CB-406-F




CB-406-G

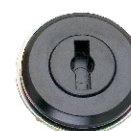


A




B




D





E




F



G

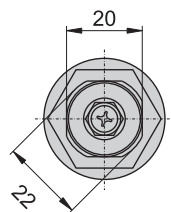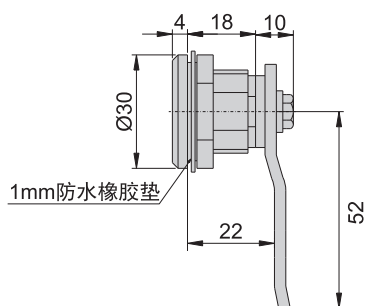

开孔尺寸图

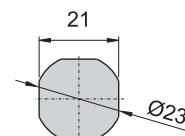

CD-406-A




CD-406-B



CD-406-D



CD-406-E



CD-406-F



CD-406-G



CF-406-A



CF-406-B




CF-406-D



CF-406-E




CF-406-F



CF-406-G




A




B




D






E




F




G

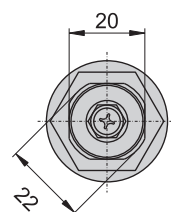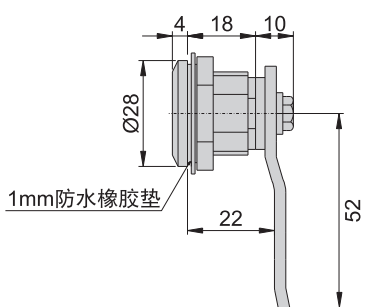


开孔尺寸图

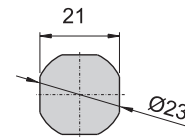

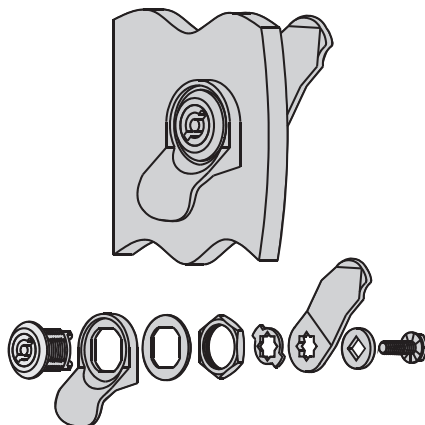


3mm厚档片的回转锁安装示意图：

(1)

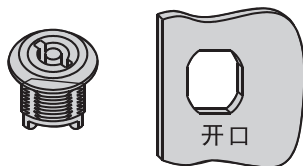


装时前端入开口 按照角度 符合方向安置

(2)

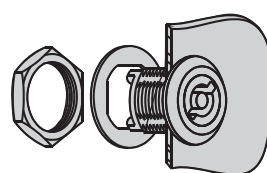


套入 拧紧螺母

(3)

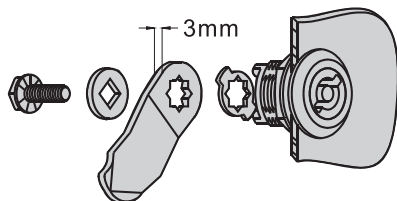

方向与角度配合文件片组合方法


(4)

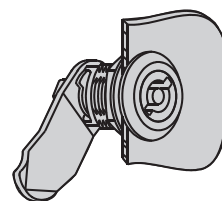

回转锁安装完成


4mm厚档片的回转锁安装示意图：

(1)

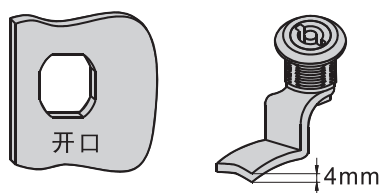


可先装配直角回转锁

(2)

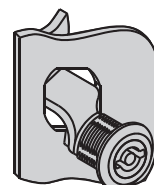


将直角回转锁放入门板开口 选择方向

(3)

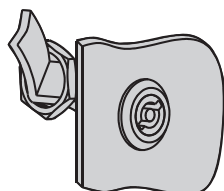

套入螺母 顺方向

(4)

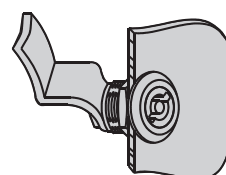

拧紧螺母 直角回转锁安装完成